Putting the chair back in the box.

For the <u>Dynamic</u>: first place the lumbar support in the *highest* position by loosening the upper

adjustment knob on the back and sliding the lumbar support all the way up. Then, flip the entire back support forward by giving it a quick firm push.

For all other models: Place the lumbar support in the *lowest* position.

For all other models: Place the lumbar support in the *lowest* position.

1:

2:

3:

4:



Photo 1

Adjust the seat height such that the top of the chair matches the rim of the cardboard box (photo 2).



Photo 2

Fold and tape the box securely (photo 3).



Photo 3

The carrier will pick up the box.

PLEASE MAKE SURE THE CHAIR FITS PRECISELY IN THE BOX AND THAT THERE ARE NO PRESSURE POINTS OR ELEVATED BUMPS.