

Chair Sizing & Caster Chart


Seat depth: accommodates different leg lengths.

The seat depth can be manually adjusted with one side handle.

Seat height: accommodates different body heights.

The seat height can be manually adjusted up and down with one handle on the side, and the lumbar support can be raised or lowered by setting one knob at the back.

For proper height measuring we need to know your body height and the height of your work surface. For the ErgoDynamic® your body weight is also needed.

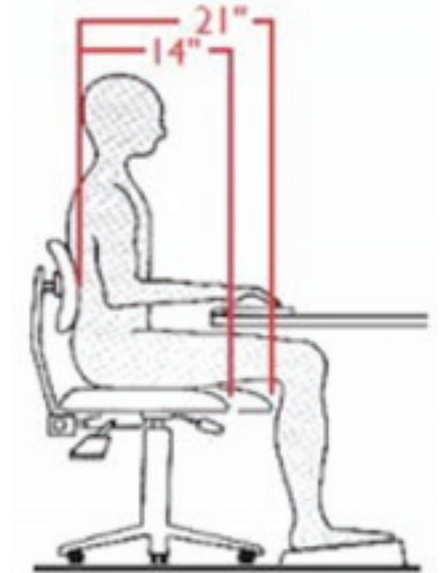

CorrectSit®

Cylinder size M if body height is < 6 ft

Cylinder size L if body height is > 6 ft

Cylinder size X if body height is > 6 ft 4", or if work surface is elevated

ErgoSolex®

Cylinder size M if body height is < 6 ft

Cylinder size L if body height is > 6 ft

Cylinder size X if body height is > 6 ft 4", or if work surface is elevated

ComfortMove®

Cylinder size S if body height is < 6 ft

Cylinder size M if body height is > 6 ft

Cylinder size L if body height is > 6 ft 4", or if work surface is elevated

ErgoDynamic®

Cylinder size M if body height is < 6 ft

Cylinder size L if body height is > 6 ft

Tilting mechanism ErgoDynamic:

350N if body weight is < 110 lbs

450N if body weight is between 110 - 160 lbs

550N if body weight is between 160 - 240 lbs

650N if body weight is > 240 lbs (maximum 275 lbs)

Seat Extra-wide seat available upon request. Standard included with 650N models.

Caster Types

1. Basic casters (black ABS plastic, 50mm diameter - recommended for hard floors)
2. CM casters (silver colored ABS plastic with black rubber, 60mm diameter - recommended for carpet floors)
3. Sit-Lock casters (black/grey rubber, 50mm diameter - block when sitting down, roll when not)
4. Rise-Lock casters (black/grey rubber, 50mm diameter - roll when sitting on down, block when not)
5. Sliders (black plastic, 50mm - 60mm diameter - recommended when rolling wheels are inconvenient)